

The electricity used by compressors for air accounts for **approximately 20**% of that consumed by the entire factory. Also, **70**% of the air consumed in the process is used for air blowing. SMC blow guns have minimal pressure loss compared with conventional models, so they can achieve equivalent performance at lower pressures and with less volume of air consumption. As a result, it is possible to achieve a **20**% **reduction** in power consumption.

#### GENTLE AUTOMATIC SOLUTION SDN BHD

**Conventional model** 


SMC Blow gun + S coupler + Coil tube

No. 36 Jalan Industri USJ 1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor. CAT.NAS50-20F TEL: 603-8023 7743 / 8743 FAX: 603-8023 9743 EMAIL: sales@gentle.com.my


## **Energy Saving Pneumatic System Proposal**

## **Energy Saving Effects**

When the yearly total working hours spent on air blowing amounts to 8,300 hours, use of conventional models results in power consumption power totaling 12,948 kW/h. When using the SMC system (Blow gun + S coupler + Coil tube), however, the yearly power is reduced to 10,375 kW/h for a total yearly saving of 2,573 kW/h, or 20% of the total.

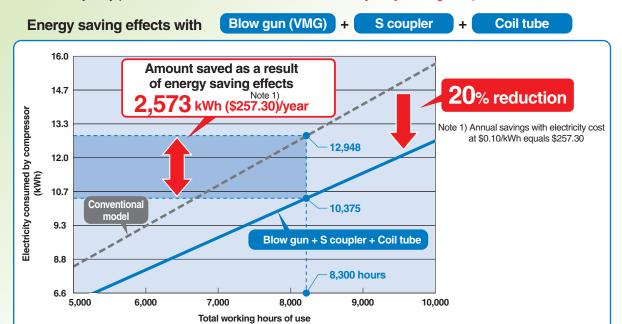

## Energy saving effects with Blow gun (VMG)

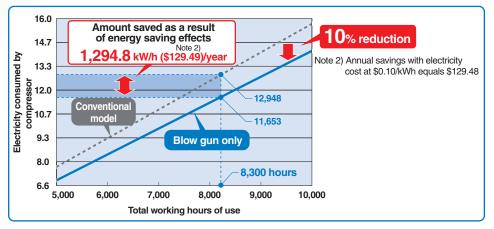

#### Calculation conditions


- · Blowing distance: 3.94 inch (100 mm)
- · Impact pressure: 1.6 psi (0.011 MPa)

#### Work model

- . Blow time: 10 seconds
- Frequency: 12 times/hour
- · Working hours: 10 hours/day
- · Working days: 250 days/year
- Units used: 100
- Resulting total working hours: 8,300 hours

## Valve Construction and Pressure Loss

Straighter flowing fluid "improves pressure loss!"

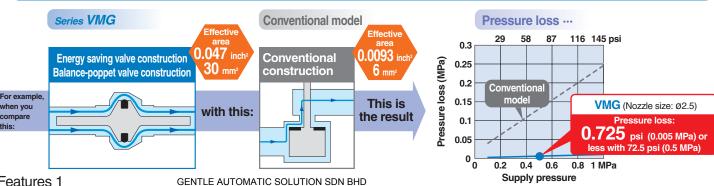

Features 1

No. 36 Jalan Industri USJ 1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor. TEL: 603-8023 7743 / 8743 FAX: 603-8023 9743 EMAIL: sales@gentle.com.my


## SMC helps you work toward a revolutionized production system with a focus on saving-energy.






## **Example of Improvement**


Review the air-blow job and change to the SMC blow gun, S coupler and coil tube to create a larger effective area.

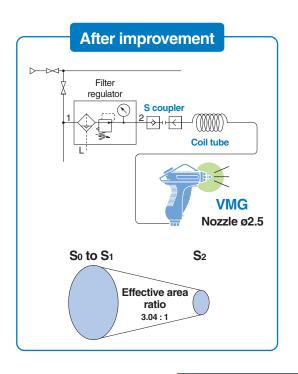



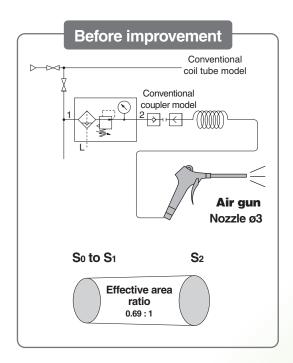


		After improvement	Before improvement
	Coupler	S coupler	Conventional model
Equipment	Piping	TCU1065-1-20-X6	Conventional coil tube model (I.D. Ø5, equivalent length 5 m)
	Air gun	VMG (Nozzle size Ø2.5)	Conventional model (Nozzle size Ø3)
	Coupler, Piping (S <sub>0</sub> )	0.021 inch² (13.45 mm²)	0.0079 inch² (5.1 mm²)
Effective area	Air gun (S <sub>1</sub> )	0.047 inch² (30mm²)	0.0093 inch² (6 mm)²
area	Nozzle (S <sub>2</sub> )	0.0068 inch² (4.4 mm²)	0.0098 inch² (6.3 mm)²
Effective area ratio (S <sub>0</sub> to S <sub>1</sub> : S <sub>2</sub> )		3.04 : 1 0.69 : 1	
Impact pressu	re	1.6 psi (0.011 MPa) (at a distance of 3.94 inch (100 mm))	1.6 psi (0.011 MPa) (at a distance of 3.94 inch (100 mm))
Regulator pres	ssure	58 psi (0.4 MPa)	73 psi (0.5 MPa)
Pressure insid	le nozzle	55.8 psi (0.385 MPa)	40.0 psi (0.276 MPa)
Compressor pressure		72.5 psi (0.5 MPa)	87.0 psi (0.6 MPa)
Air consumption		9.08 cfm (257 dm³/min) (ANR)	10.1cfm (287 dm³/min) (ANR)
Power consumption by compressor		1.25 kW	1.56 kW

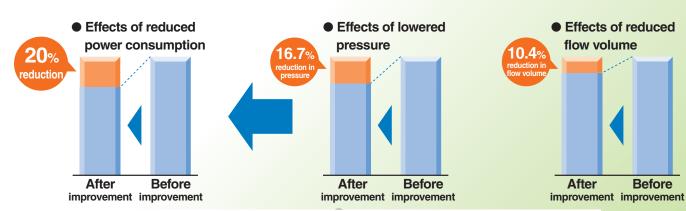

## Blow Gun, Coil Tube and S Coupler Selection

Recommended system in accordance with the distance

Energy saving effects are enhanced through the appropriate blow gun model selection in accordance with the distance from the target object.

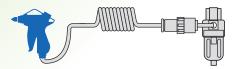


Distance	Recommended system					
	Blow gun	Nozzle size	Fitting	Coil tube*	S coupler	
Up to 20 mm	VMG1□□-02-01	ø <b>1</b>	KQ2H06-02S	TCU0604□-1-20-X6	KK4P-06H	
Up to 40 mm	VMG1□□-02-02	ø <b>1.5</b>	KQ2H06-02S	TCU0604□-1-20-X6	KK4P-06H	
Up to 60 mm	VMG1□□-02-03	ø <b>2</b>	KQ2H08-02S	TCU0805□-1-20-X6	KK4P-08H	
Over 60 mm	VMG1□□-02-04	ø <b>2.5</b>	KQ2H10-02S	TCU1065□-1-20-X6	KK4P-10H	

\*□: B (Black), W (White), R (Red), BU (Blue), Y (Yellow), G (Green), C (Clear), YR (Orange)

## **Energy Saving Flow**


Air guns with an effective area around 0.0093 inch<sup>2</sup> (6 mm<sup>2</sup>)are most commonly used. But the SMC blow gun achieves a 0.047 inch<sup>2</sup> (30 mm<sup>2</sup>) effective area.

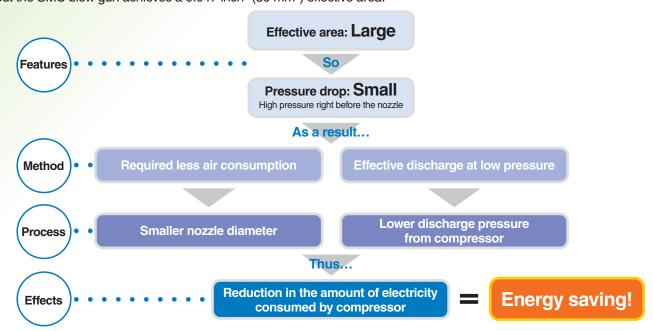


## **Related Product**

Features 3

## For pressure loss improvement **S coupler:** Series KK

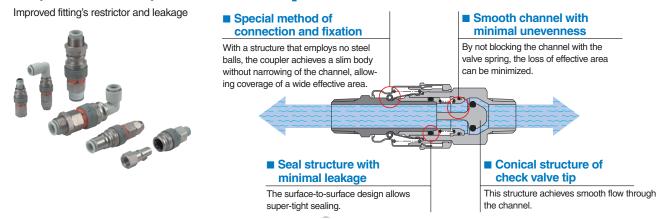


GENTLE AUTOMATIC SOLUTION SDN BHD

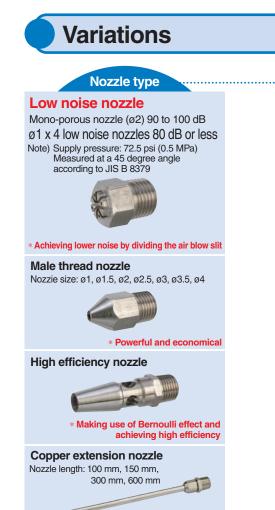


Secures more power even at a greater

distance from a workpiece.

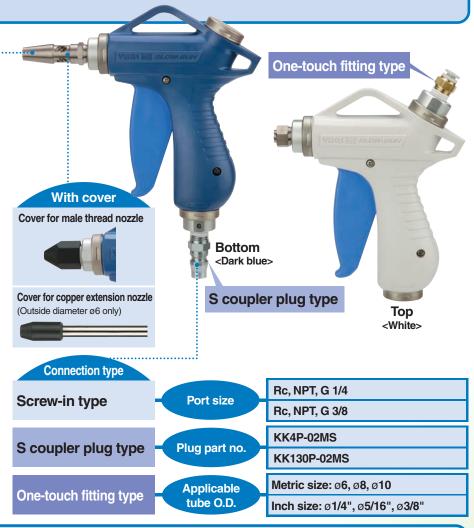

## Operability, Safety, Environment

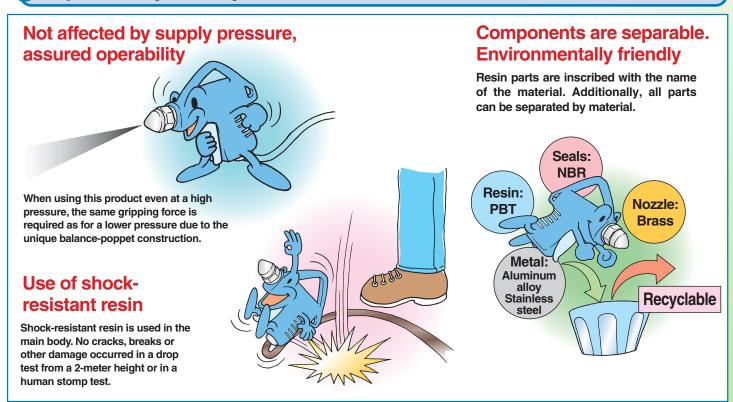

# Blow Gun Series VMG





#### **How to Order**

VMG 1 1 W - 02 - 32 - C

	Piping entry
1	Bottom
2	Top

W White
BU Dark blue

#### Connection size

Symbol	Piping connection method	Size a	nd model no.	
02			Rc1/4	
03			Rc3/8	
N02	Threaded	Thread size	NPT1/4	
N03	Trireaded	Trireau size	NPT3/8	
F02			G1/4	
F03			G3/8	
11	S coupler	Model no. of	KK4P-02MS	
12	plug	coupler used	KK130P-02MS	
H06	Metric size	NA-dalas af	KQ2H06-02S	
H08	one-touch fitting	Model no. of fitting used	KQ2H08-02S	
H10	0110 10001111111119	inting asca	KQ2H10-02S	
H07	Inch size	Model no. of	KQ2H07-35S	
H09	one-touch fitting	fitting used	KQ2H09-35S	
H11	one teach many	g dood	KQ2H11-35S	

Note 1) S coupler and fitting are included in the same package.

Note 2) Port size is Rc1/4 if using the S coupler plug.

Note 3) The blow gun port size is Rc1/4 if using the metric size one-touch fitting.

Note 4) The blow gun port size is NPT1/4 if using the inch size one-touch fitting.

## **Specifications**

Fluid	Air		
Operating pressure range	0 to 145 psi (	0 to 1.0 MPa)	
Proof pressure	217 psi (	1.5 MPa)	
Ambient and fluid temperature	23 to 140°F (-5 to 60°C) (No freezing)		
Flow-rate characteristics (With nozzle removed)	C (dm³/s·bar): 6.0, b: 0.25 (Effective area: 0.047 inch² (30 mm²))		
Port size	Rc, NPT,	G 1/4, 3/8	
Piping entry	Bottom	Тор	
Nozzle port size	Rc1/4		
Weight (Main unit only)	5.8 oz (165 g)		
Operational force (when the valve is fully open)	1.57 lbf (7 N)		

Nil	None
С	With nozzle cover/HNBR
CF	With nozzle cover/Fluororubber

#### Nozzle

NOZZI	e		
Symbol	Type	Nozzle size	Nozzle part no.
Nil	V	Vithout nozzle	
01		ø1	KN-R02-100
02		ø1.5	KN-R02-150
03		ø2	KN-R02-200
04	Male thread nozzle	ø2.5	KN-R02-250
05		ø3	VMG1-R02-300
06		ø3.5	VMG1-R02-350
07		ø4	VMG1-R02-400
11		ø1	KNH-R02-100
12	High efficiency nozzle	ø1.5	KNH-R02-150
13		ø2	KNH-R02-200
21		ø0.75 x 4	KNS-R02-075-4
22	Low noise nozzle	ø0.9 x 8	KNS-R02-090-8
23	with male thread	ø1 x 4	KNS-R02-100-4
24		ø1.1 x 8	KNS-R02-110-8


#### **Extension nozzle**

Symbol	Type	Nozzle length	Nozzle size	Nozzle part no.
31		300 mm	ø1.5	VMG1-06-150-300
32		300 11111	ø2	VMG1-06-200-300
33	ø6 copper	600 mm	ø1.5	VMG1-06-150-600
34	extension	000 111111	ø2	VMG1-06-200-600
35	extension nozzle <sup>Note)</sup>	100 mm	ø1.5	VMG1-06-150-100
36		100 11111	ø2	VMG1-06-200-100
37		150 mm	ø1.5	VMG1-06-150-150
38		150 11111	ø2	VMG1-06-200-150
41			ø2.5	VMG1-08-250-100
42		100 mm	ø3	VMG1-08-300-100
43			ø3.5	VMG1-08-350-100
44			ø2.5	VMG1-08-250-150
45	ø8 copper	150 mm	ø3	VMG1-08-300-150
46	extension		ø3.5	VMG1-08-350-150
47	nozzle <sup>Note)</sup>		ø2.5	VMG1-08-250-300
48		300 mm	ø3	VMG1-08-300-300
49			ø3.5	VMG1-08-350-300
50			ø2.5	VMG1-08-250-600
51		600 mm	ø3	VMG1-08-300-600
52			ø3.5	VMG1-08-350-600

Note) Part number for set of extension nozzle and fitting. Extension nozzle and fitting are included in the same package.

Refer to "How to attach extension nozzle" in the operation manual for assembly procedures.

#### Construction

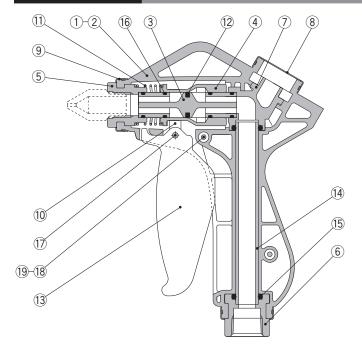

Com	ponent Parts		
No.	Description	Material	Note
1	Body L	PBT	
2	Body R	PBT	
3	Main valve	PBT	
4	Valve guide	POM	
5	Nozzle holder	Aluminium alloy	Anodized
6	Port	Aluminium alloy	Anodized
7	Elbow	PBT	Only for the VMG12□
8	Cover	Stainless steel	
9	Ring	Stainless steel	
10	Arm	PBT	
11	Spring	Stainless steel	
12	Main valve seal	HNBR	
_13	Lever	PBT	
14	Piping (bottom)	РОМ	Only for the VMG11 Combined with the elbow 7.
15	O-ring	NBR	
16	O-ring	NBR	
17	Parallel pin	Stainless steel	
18	Cross recessed round head screw	Stainless steel	
19	Hexagon nut	Stainless steel	


Note) Grease is used on rubber and sliding sections.


## **Flow-rate Characteristics**

0.2

0.3


Note) Values when the main valve is fully open

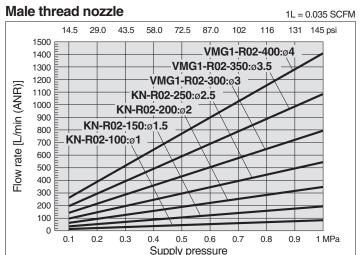


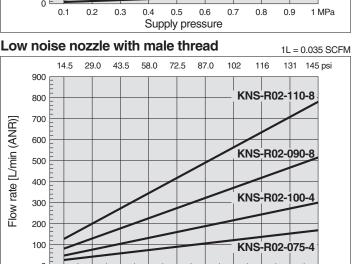

0.5

Supply pressure

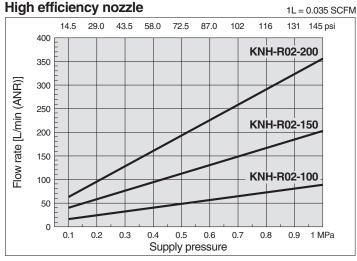


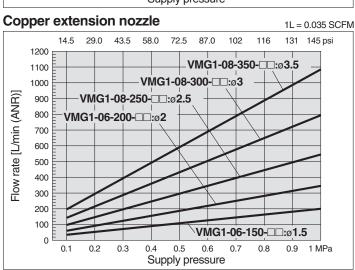

0.9

## Series VMG

#### **Dimensions**

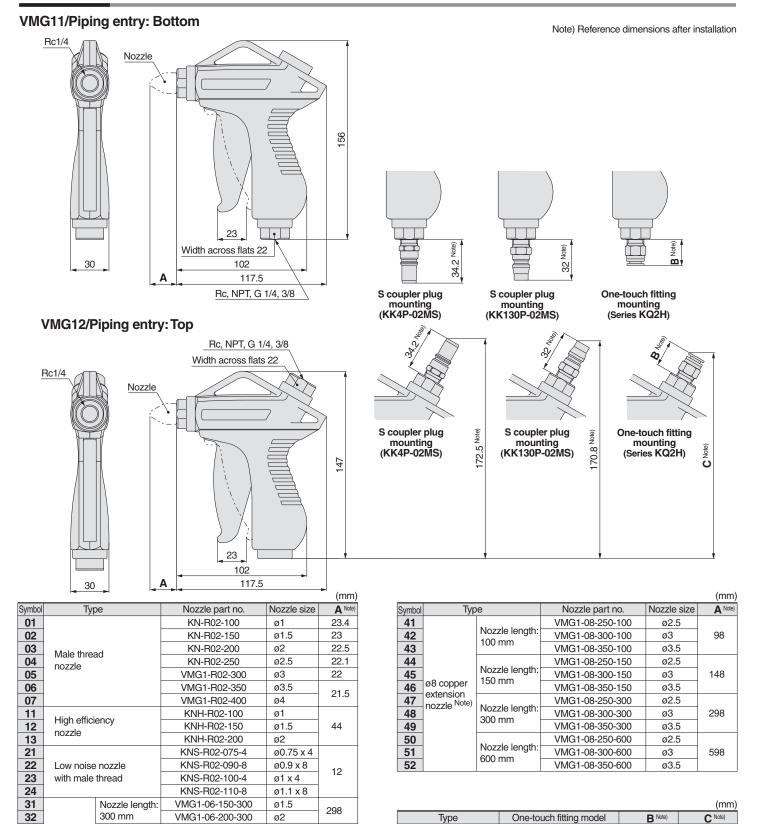

150 mm Note) Reference dimensions after installation

Nozzle length:

Nozzle lenath:

Nozzle length:

600 mm

100 mm

VMG1-06-150-600

VMG1-06-200-600

VMG1-06-150-100

VMG1-06-200-100

VMG1-06-150-150

VMG1-06-200-150

ø1.5

ø1.5

ø1.5

ø2

ø2

ø2

598

98

148

KQ2H11-35S Note) Reference dimensions after installation

KQ2H06-02S

KQ2H08-02S

KQ2H10-02S

KQ2H07-35S

KQ2H09-35S

158

168

158

168

161.5

161.5

17

20.5

27.5

20.5

27.5

17

33

34

35

36

37

38

ø6 copper

extension nozzle Note)

Metric size

Inch size

one-touch fitting


one-touch fitting

#### Male thread nozzle: KN

(mm)



Part no.	Nozzle size <b>D</b>	Connection thread	Width across flats	L <sub>1</sub>	<b>A</b> *
KN-R02-100	ø1			31.4	25.4
KN-R02-150	ø1.5			31	25
KN-R02-200	ø2			30.5	24.5
KN-R02-250	ø2.5	R1/4	14	30.1	24.1
VMG1-R02-300	ø3			30	24
VMG1-R02-350	ø3.5			29.5	23.5
VMG1-R02-400	ø4			29.5	23.5

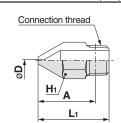


#### High efficiency nozzle: KNH

(mm)



Part no.	Nozzle size <b>D</b>	Connection thread	Width across flats H1	L <sub>1</sub>	<b>A</b> *
KNH-R02-100	ø1				
KNH-R02-150	ø1.5	R1/4	14	52	46
KNH-R02-200	ø2				

<sup>\*</sup> Reference dimensions after R thread installation

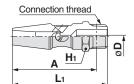



#### Low noise nozzle with male thread: KNS

(mm)



Part no.	Nozzle size	Connection	Width across flats	L <sub>1</sub>	<b>A</b> *
raitiio.	D	thread	H <sub>1</sub>	Lī	A
KNS-R02-075-4	ø0.75 x 4				
KNS-R02-090-8	ø0.9 x 8	D4/4	14	20	14
KNS-R02-100-4	ø1 x 4	R1/4	14	20	14
KNS-R02-110-8	ø1.1 x 8				

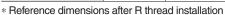

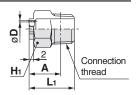

## Copper extension nozzle set


(mm)



ıC	361							
	Part no.	Nozzle size <b>D</b>	Outside diameter	L <sub>1</sub>	L <sub>2</sub> Note1)	L Note1)	Width across flats	
	VMG1-06-150-100	ø1.5		100	100	100		
	VMG1-06-200-100	ø2		100	100	106		
	VMG1-06-150-150	ø1.5		150	450	450		
	VMG1-06-200-150	ø2	0		150	150	156	40
	VMG1-06-150-300	ø1.5	ø6	300	300	306	12	
	VMG1-06-200-300	ø2		300	300	306		
	VMG1-06-150-600	ø1.5		600	600	606		
	VMG1-06-200-600	ø2		000	600	606		
	VMG1-08-250-100	ø2.5						
	VMG1-08-300-100	ø3		100	100	106		
	VMG1-08-350-100	ø3.5						
	VMG1-08-250-150	ø2.5						
	VMG1-08-300-150	ø3		150	150	156		
	VMG1-08-350-150	ø3.5	ø8				14	
	VMG1-08-250-300	ø2.5	90				17	
	VMG1-08-300-300	ø3		300	300	306		
	VMG1-08-350-300	ø3.5						
	VMG1-08-250-600	ø2.5						
	VMG1-08-300-600	ø3		600	600	606		
	VMG1-08-350-600	ø3.5						

Note 1) Reference dimensions after installation

Note 2) Copper extension nozzle and self-align fitting are included in the same package, (but unassembled). Refer to "How to attach extension nozzle" in the operation manual for assembly procedures.

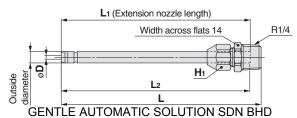

<sup>\*</sup> Reference dimensions after R thread installation

## Series VMG


## **Dimensios: Nozzle Cover**

#### Cover for male thread nozzle






Nozzle cover part no.	Material	Applicable blow gun model		
Nozzie cover part no.	ivialeriai	Model	Nozzle type	
P5670129-01	HNBR	VMG1□□-□-01 to 04	Male thread nozzle	
P5670129-01F	Fluororubber		ø1 to ø2.5	
<b>P5670129-02</b> HNBR		VMG1□□-□-05 to 07	Male thread nozzle	
P5670129-02F	Fluororubber	VIVIG 105 t0 07	ø3 to ø4	

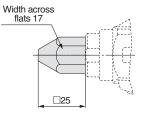

VMG1□-□□-1 to 04

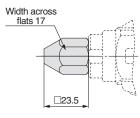


VMG1□-□□-05 to 07

### Cover for copper extension nozzle

(mm)



Nozzla cover port po	Material	Applicable blow gun model		
Nozzle cover part no.	ivialeriai	Model	Nozzle type	
P5670129-11	HNBR	VMG1□□-□-31 to 38	ø6 copper	
P5670129-11F	Fluororubber	VIVIG 131 10 38	extension nozzle	

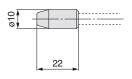


VMG1□-□□-31 to 38

## Blow Gun X35 with extension and high efficiency nozzle

## Series VMG

### **How to Order**

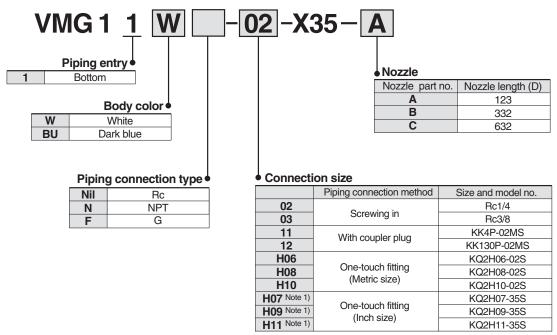

Note 1) In the case of inch size one-touch fitting type, the port size is NPT 1/4.

## **Specifications**

Fluid	Air
Operating pressure range	0 to 145 psi (0 to 1.0 MPa)
Proof pressure	217 psi (1.5 MPa)
Ambient and fluid temperature	23 to 140°F (-5 to 60°C) (No freezing)
Flow-rate characteristics (With nozzle removed)	C (dm³/s·bar): 6.0, b: 0.25 (Effective area: 0.047 inch² (30 mm²))
Port size	Refer to table 1
Piping entry	Bottom
Nozzle port size	Rc1/4
Weight (Main unit only)	6.35 oz (180 g)
Operational force (when the valve is fully open)	1.57 lbf (7 N)

Table 1: Piping connection type


rable 1.1 iping conficction type		
Part No.	Port size	
VMG11-02-X35	Rc1/4	
VMG11-03-X35	Rc 3/8	
VMG11-N02-X35	NPR 1/4	
VMG11-N03-X35	NPT 3/8	
VMG11-F02-X35	G 1/4	
VMG11-F03-X35	G 3/8	

Table 2: Piping connection type


Part No.	Pipe part no.
VMG11-□-X35A	P5670127-100-X33
VMG11-□-X35B	P5670127-300-X33
VMG11-□-X35C	P5670127-600-X33


## Series VMG-X35

## **Dimensions**

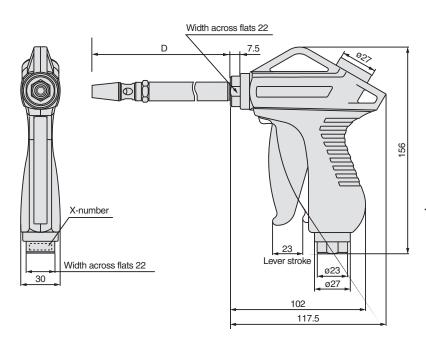

# S coupler plug/one-touch fitting mounting dimensions after installation

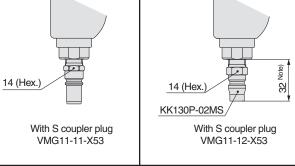


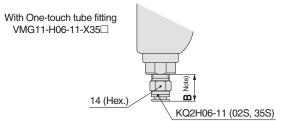

			(11111)
Type	Connection size	Model	В
Metric size one-touch fitting	H06	17	17
	H08	20.5	20.5
	H10	27.5	27.5
Inch size one-touch fitting	H07	17	17
	H09	20.5	20.5
	H11	27.5	27.5

Note) Reference dimensions after installation

## RFKSS-GAP0030 Blow-gun with extension kit

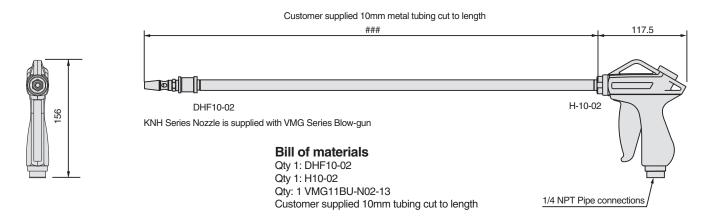

## **RFKSS-GAP0030**

Fluid	Air	
Operating pressure range	0 to 145 psi (0 to 1.0 MPa)	
Proof pressure	217 psi (1.5 MPa)	
Ambient and fluid temperature	23 to 140°F (-5 to 60°C) (No freezing)	
Effective area	0.046 inch² (30 mm²)	
Operational force (when the valve is fully open)	1.57 lbf (7 N)	



## Series VMG Specific Product Precautions 1

Be sure to read this before handling.

Selection

## **△Warning**

1. Check the specifications.

The products in this catalog are designed to be used in compressed air systems only. If the products are used in an environment where pressure or temperature is out of the specified range, damage and/or malfunction may result. Do not use under such conditions.


## **<b>⚠**Caution

 Do not apply the blow gun to flammable, explosive or toxic substances such as gas, fuel gas or refrigerant. Such substances may exude from inside the blow gun.

#### Mounting

## **△**Warning

- Install a stop valve on the supply pressure side of the blow gun to enable emergency shut off in case of unexpected leakage or damage.
- 2. When installing a nozzle on the blow gun, wrap pipe tape around the threads of the nozzle.
- 3. When installing the nozzle, secure the nozzle holder of the blow gun by applying a wrench of 22 mm width across flats to the two chamfered surfaces of the holder without applying force to the body. Then, tighten the nozzle with force within the torque range below. As a guideline, it is equivalent to 2 to 3 additional turns with a tool after manual tightening.

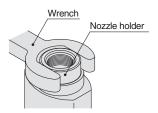

Nozzle tightening torque range 8.9 to 10.3 lb-ft (12 to 14 N·m)

Insufficient tightening may cause loosening of the nozzle.

#### **Piping**

## **∧**Caution

1. Check the model, type and size before installation.

Also, confirm that there is no scratches, gouges or cracks on the product.

#### 2. Before piping


Before piping, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

#### **Piping**

## **⚠** Caution


3. Wrapping of pipe tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the blow gun. Also, when the pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

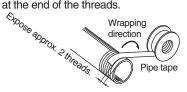

4. When tightening the threads, secure the nozzle holder of the blow gun by applying a wrench of 22 mm width across flats to the two chamfered surfaces of the holder without applying force to the body. Then, tighten the nozzle with torque specified in the table below. As a guideline, it is equivalent to 2 to 3 additional turns with a tool after manual tightening.

Be careful that tightening with torque beyond the ranges in the table below may cause damage to the body.

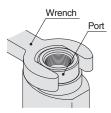

Male thread	Tightening torque Ib-ft N·m
R1/4	8.9 to 10.3 (12 to 14)
R3/8	16.2 to 17.7 (22 to 24)

- 5. Allow extra length when connecting a tube to accommodate changes in tube length due to pressure.
- Confirm that no twisting, turning or tensile force or moment load is applied to the port or tube. This may cause fittings to fracture or tubes to be crushed, burst or come loose.
- 7. Do not abrade, entangle or scratch the tube. This may cause the tube to be crushed, burst or come loose.

#### Lubrication

## **△**Warning

1. Do not lubricate the product.

It may contaminate or damage the target object.

#### Air Supply

## **⚠** Warning

1. Use clean air.

Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.



## Series VMG Specific Product Precautions 2

Be sure to read this before handling.

#### **Air Supply**

## **⚠** Caution

- 1. Install air filters.
  - Install air filters at the upstream side of blow gun. Choose the filtration degree of 5  $\mu m$  or finer.
- Install an after-cooler, air dryer or water droplet separator, etc.

Air excessive drainage may cause a malfunction of blow gun and contaminate or damage the target object. To prevent this, install an after-cooler, air dryer or water droplet separator, etc.

#### **Operating Environment**

## **Marning**

- 1. Do not use in an atmosphere of corrosive gases, chemicals, sea water, water or water vapor or in an environment where such substances may adhere.
- 2. Provide shading in an environment where the product is exposed to the sunlight.
- 3. Do not use in an environment where a heat source is at a close distance.
- 4. Do not use in an environment where static electricity is a problem. It may cause malfunction or failure of the system. Please contact SMC for use in such an environment.
- 5. Do not use in an environment where spatters are generated. There is danger of fires caused by spattering. Please contact SMC for use in such an environment.
- 6. Do not use in an environment where the product is exposed to cutting oil, lubricating oil or coolant oil. Please contact SMC for use in an environment where the product is exposed to such liquid as cutting oil, lubricating oil or coolant oil.

#### Maintenance

## **∧** Caution


- 1. In periodical inspections, check the following items and replace the parts if necessary.
  - a) Scratches, gouges, abrasion, corrosion
  - b) Air leakage
  - c) Twisting, crushing and turning of connected tubes
  - d) Hardening, deterioration and softening of connected tubes
  - e) Loosening of nozzles
- 2. When removing the product, first stop the pressure supply, exhaust compressed air in the piping and check the condition of atmospheric release.
- 3. Do not disassemble or remodel the body of the product.

#### Handling

## 

- 1. To prevent lurching of the nozzle due to air pressure, confirm that the nozzle is not loosened or rattling by pulling it by hand before operation.
- 2. Make sure to wear safety goggles to protect yourself from splashed substances.
- 3. Do not direct the tip of the nozzle at the face or other parts of a human body. It may cause danger to personnel.
- 4. Do not use the product to clean or remove toxic substances or chemicals.
- 5. Do not drop, step on or hit the product. It may cause damage to the product.
- 6. Do not use the product to disturb public order or public hygiene.
- 7. This product is not a toy.
- After blowing, make sure to hang the product on a hook, etc.

If leaving the product in a dusty place, particles will enter the product and may result in a malfunction.

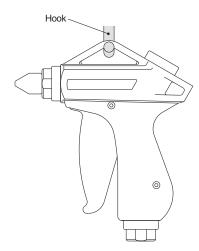

- 9. When the blow gun is used or stored, confirm that no twisting, turning or tensile force or moment load is applied to the port or tube. This may cause fittings to fracture or tubes to be crushed, burst or come loose.
- 10. When attaching a nozzle cover, align the hex parts of the nozzle and nozzle cover before covering. When attaching an extension nozzle cover, confirm that the nozzle tip is completely inserted into the extension nozzle cover.
- 11. Do not use a nozzle cover or extension nozzle cover if it is cracked or does not fit securely, and replace with a new cover.

## **<b>⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

⚠ Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ Danger: Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

## **∕**Marning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

#### **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary

If anything is unclear, contact your nearest sales branch.

## Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.\*2)
- Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - \*2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Edition B • Related products KK/KKH series S coupler, changed to the model change products

High efficiency nozzle data listed.

Edition C • Best Pneumatics No.1 (Pages 1889 to 1899) extracted.

Edition D • Added the KK130 series S coupler and one-touch fitting type. Number of pages from 16 to 12.

Edition E • Not available

- Edition F Added ø3, ø3.5, ø4 to male thread nozzle.
  - With cover is added to male thread nozzle and extension nozzle.
  - Added outside diameter ø8 to copper extension nozzle.
  - Added 100 mm and 150 mm lengths to copper extension nozzle.
  - Number of pages from 12 to 16.

QR

Nafety Instructions Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

JR

NS

00

## Global Manufacturing, Distribution and Service Network

## Worldwide Subsidiaries

#### **North & South America**

- U.S.A. SMC Corporation of America
- CANADA SMC Pneumatics (Canada) Ltd.
- MEXICO SMC Corporation(México), S.A. de C.V.
- BRAZIL SMC Pneumaticos do Brasil Ltda.
- CHILE SMC Pneumatics (Chile) S.A.
- COLOMBIA SMC Colombia Sucursal de SMC Chile S.A.
- ARGENTINA SMC Argentina S.A.
- BOLIVIA SMC Pneumatics Bolivia S.r.I.
- VENEZUELA SMC Neumatica Venezuela S.A.
- PERU (Distributor) IMPECO Automatización Industrial S.A.C.
- ECUADOR (Distributor) ASSISTECH CIA. LTDA.

#### Asia/Oceania

- CHINA SMC(China)Co.,Ltd.
- CHINA SMC Pneumatics (Guangzhou) Ltd.
- HONG KONG SMC Pneumatics(Hong Kong)Ltd.
- TAIWAN SMC Pneumatics(Taiwan)Co.,Ltd.
- KOREA SMC Pneumatics Korea Co., Ltd.
- SINGAPORE SMC Pneumatics(S.E.A.)Pte.Ltd.
- MALAYSIA SMC Pneumatics(S.E.A.)Sdn.Bhd.
- THAILAND SMC (Thailand) Ltd.
- PHILIPPINES Shoketsu SMC Corporation
- INDIA SMC Pneumatics(India)Pvt.Ltd.
- ISRAEL (Distributor) Baccara Geva A.C.S. Ltd.
- INDONESIA (Distributor) PT. Sinar Mutiara Cemerlang
- VIETNAM (Distributor) Dy Dan Trading Co.,Ltd.
- PAKISTAN (Distributor) Jubilee Corporation

#### Asia/Oceania

- SRI LANKA (Distributor) Electro-Serv(Pvt.)Ltd.
- IRAN (Distributor) Abzarchian Co. Ltd.
- U.A.E. (Distributor) Machinery People Trading Co. L.L.C.
- KUWAIT (Distributor) Esco Kuwait Equip & Petroleum App. Est.
- SAUDI ARABIA (Distributor) Assaggaff Trading Est.
- BAHRAIN (Distributor) Mohammed Jalal & Sons W.L.L. Technical & Automative Services
- SYRIA (Distributor) Miak Corporation
- JORDAN (Distributor) Atafawok Trading Est.
- BANGLADESH (Distributor) Chemie International AUSTRALIA SMC Pneumatics(Australia)Pty.Ltd.
- NEW ZEALAND SMC Pneumatics(N.Z.)Ltd.
- JAPAN SMC Corporation

#### Europe/Africa

- GERMANY SMC Pneumatik GmbH
- SWITZERLAND SMC Pneumatik AG
- U.K. SMC Pneumatics (U.K.) Ltd.
- FRANCE SMC Pneumatique SA
- SPAIN / PORTUGAL SMC España S.A.
- ITALY SMC Italia S.p.A.
- GREECE SMC HELLAS E.P.E
- IRELAND SMC Pneumatics (Ireland) Ltd.
- NETHERLANDS (Associated company) SMC Pneumatics BV
- BELGIUM (Associated company) SMC Pneumatics N.V./S.A.
- DENMARK SMC Pneumatik A/S
- AUSTRIA SMC Pneumatik GmbH (Austria)

Vancouver

#### Europe/Africa

- CZECH REPUBLIC SMC Industrial Automation CZ s.r.o.
- HUNGARY SMC Hungary Ipari Automatizálási Kft.
- POLAND SMC Industrial Automation Polska Sp. z o.o.
- SLOVAKIA SMC Priemyselná Automatizácia Spol s.r.o. SLOVENIA SMC Industrijska Avtomatika d.o.o.
- **BULGARIA SMC Industrial Automation Bulgaria EOOD**
- CROATIA SMC Industrijska Automatika d.o.o.
- BOSNIA AND HERZEGOVINA(Distributor) A.M. Pneumatik d.o.o.
- SERBIA(Distributor) Best Pneumatics d.o.o.
- UKRAINE(Distributor) PNEUMOTEC Corp.
- FINLAND SMC Pneumatics Finland Oy
- NORWAY SMC Pneumatics Norway AS
- SWEDEN SMC Pneumatics Sweden AB
- ESTONIA SMC Pneumatics Estonia Oü
- LATVIA SMC Pneumatics Latvia SIA
- I ITHUANIA(LIETUVA) UAB "SMC Pneumatics"
- ROMANIA SMC Romania S.r.I.
- **RUSSIA SMC Pneumatik LLC.**
- KAZAKHSTAN SMC Kazakhstan, LLC.
- TURKEY (Distributor) Entek Pnömatik Sanayi ve. Ticaret Sirketi
  - MOROCCO (Distributor) Soraflex
- TUNISIA (Distributor) Byms
- EGYPT (Distributor) Saadani Trading & Industrial Services
- NIGERIA (Distributor) Faraday Engineering Company Ltd.
  - SOUTH AFRICA (Distributor) Hvflo Southern Africa (Ptv.) Ltd.

Montreal

## U.S. & Canadian Sales Offices

#### **WEST**

**Austin Dallas** 

Los Angeles

**Phoenix** 

**Portland** San Francisco

Vancouver

Chicago

Cleveland

Milwaukee

St. Louis

Windsor

**Boston** 

**Nashville** 

Richmond

Rochester

## **EAST Atlanta**

Birmingham

Charlotte

**New Jersey** 

**Tampa** Montreal

## CENTRAL

Cincinnati

**Detroit** 

Indianapolis

Minneapolis

**Toronto** 



## (800) SMC.SMC1 (762-7621)

e-mail: sales@smcusa.com For International inquiries: www.smcworld.com

GENTLE AUTOMATIC SOLUTION SDN BHD

No. 36 Jalan Industri USJ 1/13, Taman Perindustrian USJ 1, 47600 Subang Jaya, Selangor. TEL: 603-8023 7743 / 8743 FAX: 603-8023 9743 EMAIL: sales@gentle.com.my



